

# REMINGTON™

## REVEAL™

MAN3000

### Use and Care Guide



#### Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.  
Register online at: [RemingtonProducts.com](http://RemingtonProducts.com)

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS BEFORE USING.

## DANGER

#### TO REDUCE THE RISK OF ELECTRIC SHOCK:

- Keep the appliance dry.
- Make sure the power plug and cord do not get wet.
- Do not plug or unplug the appliance with wet hands.
- Do not reach for an appliance that has fallen into water while plugged in. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or drop into water or other liquid while plugged in.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while plugged in.
- Unplug this appliance before cleaning it.

## WARNINGS AND SAFETY PRECAUTIONS

 
#### TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE, OR INJURY TO PERSONS:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Spectrum Brands, Inc.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- In case of prolonged intensive use (e.g. milling of dead skin from your feet) the device might get very hot. In order to prevent skin burns in these situations, there should be longer breaks between each application. For your own safety, constantly monitor heat build-up in the device. This particularly applies to people who are sensitive to heat.
- This device is only intended only for the treatment of hands (manicure) and feet (pedicure).

## SAVE THESE INSTRUCTIONS

### Key Features

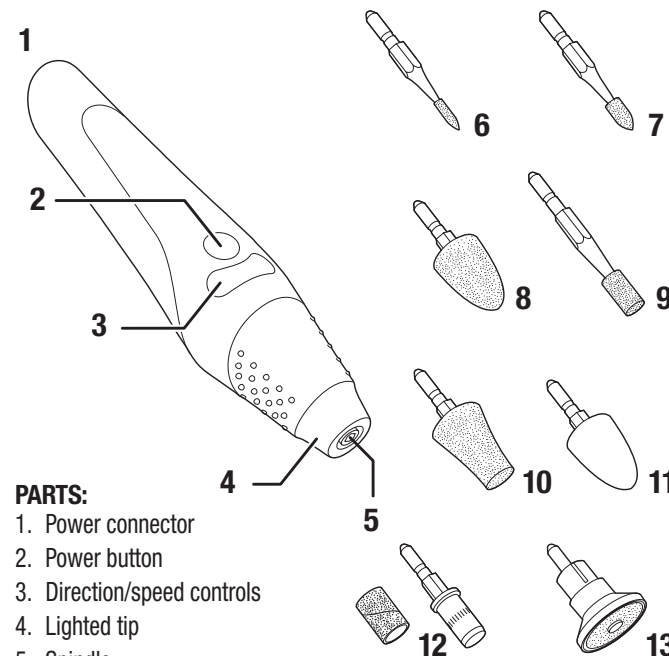

#### PARTS:

1. Power connector
2. Power button
3. Direction/speed controls
4. Lighted tip
5. Spindle
6. Needle Milling Cutter
7. Flame Milling Cutter
8. Sapphire Cone
9. Cylindrical Milling Cutter
10. Tapered Callus Rasp
11. Felt Cone
12. Sandpaper Barrel Attachment (10x refills)
13. Sapphire Disk (Fine)

#### Not shown:

14. Power Supply
15. Nail Clipper
16. Cuticle Pusher
17. Toe Separators (x2)
18. Cleaning Brush
19. Storage Case

 
### Introduction

This manicure and pedicure device comes with 12 high-quality accessories and a number of these are made with a durable sapphire coating and or/ polishing felt. With a choice of two speeds, fully lighted tip for precision detailing, together with right and left rotation, it is possible to achieve salon quality results with the use of this device.

### Instructions for Use

#### IMPORTANT:

- During use, this device can create large amounts of heat through friction. Check the results regularly during treatment. Pay attention if you, or persons being treated, are insensitive to heat or have a lowered sensitivity to pain. If you have any doubts, consult a physician.
  - Always start treatment on a low speed setting.
  - When treating calluses do not remove all of the callus so as not to compromise the natural protection of the skin.
1. Connect the power supply to the power connector. Plug the power supply in to the power supply outlet.
  2. Ensure that the device is switched off.
  3. Select the desired attachment and push it firmly into the spindle opening (FIG A).
  4. Press the power button. The light will come on.
  5. The device can rotate clockwise or counter-clockwise. Select the direction by pressing one of the direction/speed buttons. This will start the device in the direction chosen at low speed. Pressing the same button again will change the speed to high.
  6. To stop the device, press the power button.
  7. To remove an attachment, ensure that the device is switched off then pull the attachment straight out of the spindle.

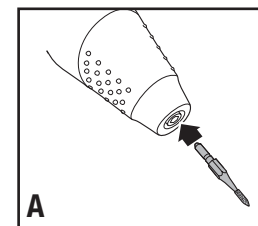

## Treatment Tips

- Always guide the attachments carefully over the surface to be treated and without applying too much pressure.
- Slowly move the device over the areas to be treated and in circular movements.
- Always work from the outside of the nail towards the tip.
- The cutting attachments will not be as effective if the skin is softened or moist. Therefore always use on dry skin.
- After each use, apply moisturizing cream to the treated areas.

## ATTACHMENTS

### Needle milling cutter

This is a precision attachment which is for the removal of ingrown nails and cutting away dead nail parts. Carefully remove the areas of nail as required and use on the lowest speed setting.

### Flame milling cutter

For the removal of ingrown nails. Use with care and on the lowest speed setting

### Sapphire cone

For filing and manicuring the nails, or removing dry skin. Ideal for use on larger areas.

### Cylindrical milling cutter

Use this attachment for the grinding and smoothing of lignified nails. Remove the layers by using in a circular motion.

### Tapered callus rasp

For removing hard skin and calluses.

### Felt cone

 
For polishing and shining the nails after filing, this attachment can also be used for cleaning the surface of the nail. Use in circular movements. Do not use in one area for too long as heat can quickly build up.

### Sandpaper barrel attachment and refills

Slide a sandpaper refill onto the attachment (FIG B) before use. Best for removing hard skin and calluses on the sole of the foot and heel. Ten sandpaper refills are included. Discard each refill after use.

### Sapphire disk (fine)

For gentle filing of the nails. Can be used with precision as it is only the inner disk that rotates. Use on the low speed setting for better control.

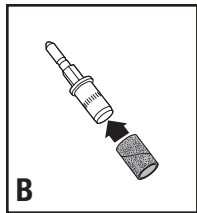

## Cleaning and Maintenance

- Never immerse the unit or power supply in water or any other liquid.
  - Ensure the device is switched off and disconnected from the power supply before cleaning.
1. Wipe over the main unit with a damp cloth. Do not submerge the unit in water.
  2. Clean attachments with the supplied brush.

## Replacement Parts

To order accessories, contact us at 800-392-6544 in the U.S. or Canada, visit us at RemingtonProducts.com, or visit your local retailer.

## Warranty

### Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

Warranty excludes:

- Accessories and storage case

### KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around product causing premature wear and breakage
- Any other conditions beyond our control

**SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

### Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or 800-268-0425 in Canada.

### *Remington Guarantees Satisfaction After 30 Days!*

#### Remington 60-Day Money Back Guarantee\*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.\*\* For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

\*Applies to U.S. and Canadian customers' returns only.

\*\*Terms and conditions apply.

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
  - a. The Remington® product;
  - b. The original sales receipt indicating price and date purchased; and
  - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:

Remington 60-Day MBG  
507 Stokely Drive, Box 1  
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.

6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.

7. Please allow 4-6 weeks to receive your refund by check.

100-240Vac, 50/60Hz

TYPE: MAN02A

**Questions or comments:** Call 800-736-4648 in the U.S. and Canada. Or visit **RemingtonProducts.com**

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562

Dist. by: Spectrum Brands Canada Inc.

255 Longside Drive, Unit 101

Mississauga, ON L5W 1L8

® Registered Trademark of Spectrum Brands, Inc.

© 2018 Spectrum Brands, Inc. 9/18

23785

Made in China

### T22-7000712-A

**Contains a listed adaptor.**