

REMINGTON®



CI8A9 Series

Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
Proof of Ownership • Product Protection • Product Registration • Special Offers
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.

DANGER

As with most electrical appliances, electrical parts are electrically live even when switch is off.

To reduce the risk of death by electric shock:

- Always unplug this appliance from the electrical outlet immediately after using.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Do not place or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it is plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs or disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from the heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Do not use an extension cord.
- This appliance is hot when in use. Do not let eyes or bare skin touch heated surfaces.

- Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.
- The plug on this appliance has one blade wider than the other, it is a polarized plug. As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit contact a qualified electrician. Do not attempt to defeat this safety feature.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- This appliance is for household use only.
- Do not plug or unplug this appliance when your hands are wet.



KEEP AWAY FROM CHILDREN

SAVE THESE INSTRUCTIONS

Product Features

Thank you for purchasing this Remington® curling wand. Please carefully read the instructions contained in this booklet, and keep them in a safe place for future reference.

Color Care Technology

Combines intelligent sensor and ceramic color-lock coating to protect color treated hair from damage and fading.

Key Features:

Ceramic Color-Lock Coating

Heat Control Sensor

410°F High Heat


15 Second Heat up

5 Digital Heat Settings

Temperature Lock

Turbo Boost Function

Auto Shut Off

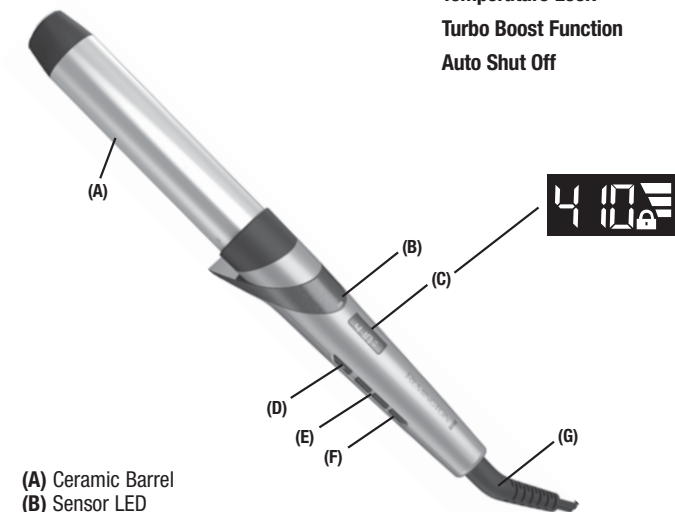

(A) Ceramic Barrel

(B) Sensor LED

(C) Temperature display

(D) Heat Control Sensor On/Off button

(E) Digital controls (+/-)

(F) On/Off button

(G) Swivel cord

(H) Heat Protective Glove

Product may vary from what is shown.

How to Use

Heat Settings

Take extra care when using a professional styler. To prevent hair damage, make sure to use the correct temperature setting for your hair type.

Setting	Hair Type
285°F–360°F	Fine or easy-to-style
360°F–390°F	Textured
390°F–410°F	Thick or hard-to-style

Heat Control Sensor

- Set the curling iron to your desired temperature.
- This optional function can be turned on or off by pressing the heat sensor button located next to the unit's +/- buttons.
- When activated, the sensor LED will illuminate, letting you know that the sensor is actively protecting your hair from excessive damage.

Thermal Glove Warning

The heat protective glove helps protect fingers from excessive heat from the hair curling wand during styling for limited time. The glove will not protect the user from touching the barrel directly, and these gloves are not for use to protect from other sources of heat.

How to Use

1. Set wand to your desired temperature.
2. Put heat protective glove on the hand you will use to wrap your hair around the wand with.
3. Section hair. For tighter curls use thinner section. For looser curls use thicker sections.
4. With your gloved hand take sectioned hair and wrap around the wand; wrapping ends last.
5. Keep hair around wand by holding the very ends with your gloved fingertips.
6. For added lift and volume, begin wrapping hair over the widest part of the barrel.



- Turbo Boost: (hold time about 2 seconds)
 - Activating: Press “+” Button and hold about 2 seconds to increase temperature to maximum 410° F setting instantly no matter what the setting is
 - Releasing: Press “-” Button to decrease the temperature like normal mode.

Maintenance

Cleaning

- To clean the unit, be sure the unit is cool and unplugged. Wipe the handle and barrel with a damp cloth. No other maintenance is necessary.
 - Do not attempt to repair the appliance yourself.
- Note:** This appliance has no user serviceable parts.

Storage

Unplug the unit whenever it is not in use. Allow it to cool, then store it out of reach of children in a safe, dry location.

Never wrap the cord around the appliance. This will cause the cord to wear prematurely and break, thus voiding the warranty. Handle the cord carefully and avoid jerking, twisting, or straining it, especially at plug connections.

Warranty

Limited Five-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a five-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Drive, P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648.

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse, or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting the unit to incorrect current and voltage
- Wrapping the cord around the appliance, causing premature wear and breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FIVE YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental, special, or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at **RemingtonProducts.com/60day**.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

120VAC 60Hz TYPE: C113AH

Questions or comments:

Call 800-736-4648 or visit **RemingtonProducts.com**

Dist. by: Spectrum Brands, Inc.,
Middleton, WI 53562

® Registered Trademark of Spectrum Brands, Inc.

© 2018 Spectrum Brands, Inc. 4/18
22140

Made in China.



T22-7000188-A

Usage Tips

Hair should be clean, dry, or nearly dry, and free of tangles before using. (This iron can also be used for quick touch-ups any time.)

1. Rest the iron on its stand on a smooth, flat surface. Plug it in for connection to a 120 volt power supply.
2. Press and hold the ON/ OFF button until the unit turns on and the LCD lights up.
3. Adjust the temperature using the +/- buttons. A series of three indicator

bars will flash while the unit heats up, then glow steadily when it has reached the selected temperature.

4. To lock the temperature buttons, press and hold the “-” button for 2 seconds and a lock icon will appear. To unlock, press and hold “-” button for another 2 seconds and the lock icon will disappear.



TEST A SMALL SECTION OF HAIR BEFORE USING; THEN ADJUST TEMPERATURE DEPENDING ON HAIR TYPE.

